


Anti-Steam Shower Crown

INSTRUCTION MANUAL

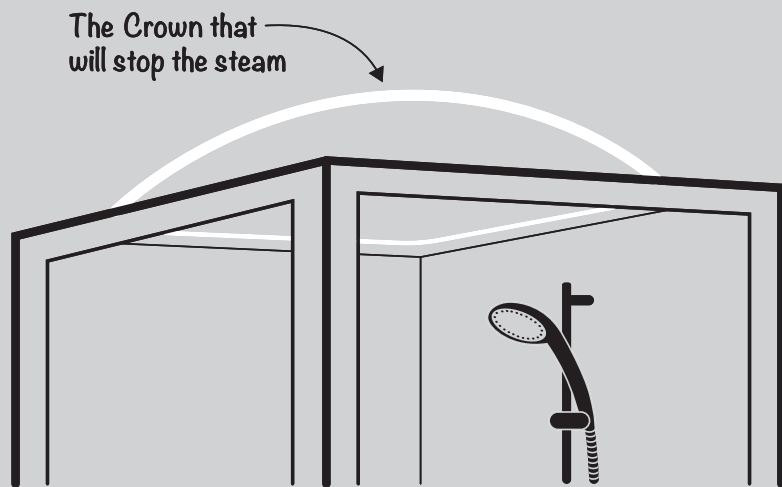

STEIN

GENERAL INFORMATION

Thank you for choosing Stein Bathroomware. When you receive your Stein Shower Crown package please check for any damage. **If damage has occurred advise your supplier immediately and do not proceed with installation.**

DISCLAIMER

Stein International Ltd are not liable for any Stein Shower Crown that has not been installed correctly. Stein Shower Crown cannot be returned or exchanged once it has been cut.

INSTALLATION NOTES

The Stein Shower Crown is manufactured from high grade acrylic and can easily be damaged or cracked or scratched if not handled with care. The Stein Shower Crown has been designed and moulded to fit industry standard size showers, however should any trimming be needed this can be carried out by heavy duty scissors or snips. It is advisable to make a template from cardboard to ensure the correct fit before cutting.

TOOLS REQUIRED (Not Supplied)


- Measuring tape
- Spirit level
- Masking tape
- Marker pen
- Double sided tape
- Clear sealant (Silaflex NG Silicone).
- Small step ladder.

SUPPLIED

Stein Shower Crown & Support Rails

PLEASE READ CAREFULLY BEFORE INSTALLATION

- It is important to note that Stein Shower Crowns requires a minimum of 35mm of horizontal flange material to strengthen the Shower Crown and to clear the shower framework when inserting into the "F" rail.
- Before any cutting, mark the cut lines with the marker pen. Be sure to measure each side dimension and the diagonals to determine if the shower is square.
- The Stein Shower Crown should be cut in temperatures above 10 degrees Celsius. Lightly using a hairdryer to raise the temperature may be sufficient to achieve this.
- Remember to measure twice before cutting. The Stein Shower Crown cannot be returned or exchanged once it has been cut

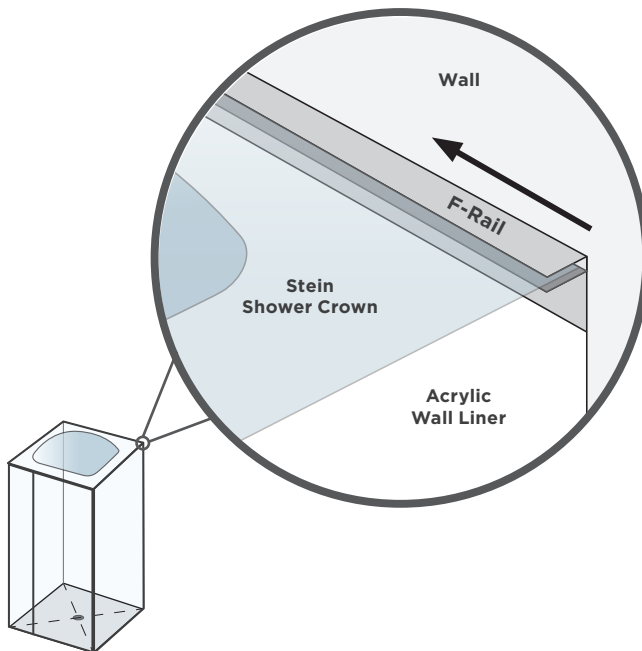

F-Rail is mounted onto the top of the Acrylic Wall liner. Stein Shower Crown slides into F-Rail

1. Measure the depth and width of the Shower at the top. Cut F rails to length using mitre cuts in corners. With a level and a soft pencil mark the line that the F rail will be positioned.
2. Clean the tiles or acrylic liner thoroughly and allow to dry.
3. On the back side of the F Rail apply short lengths of double sided tape for initial hold to the wall. Apply a small continuous bead of Silaflex NG silicone between Apply the rails one at a time using the pencil line as a guide.
4. The Stein Shower Crown comes with a protective surface on one side. Leave this in place until trimmed and fitted. To avoid confusion identify the Door side of the Shower Crown with tape.
5. Try up in place and check if the Shower Crown part is centralised to the shower.
Tip: Practice your cutting technique on a portion of Shower Crown that is clearly scrap.
6. If the sides adjacent to the walls need some trimming mark and trim these first. Use a flat and soft surface as a working platform. A 3 sided Alcove will need to be trimmed by measurement and a square as this cannot be positioned initially.
7. Sand the edges that have been trimmed to so the Shower Crown can slide into the F rail. Mark and cut the remaining side that overhangs the frame.
8. You can now remove the protective film and fit into place. The Shower Crown should not move in place and it is preferred not to use silicone as the option to remove for cleaning wouldn't be available.

Aftercare: Scratching the Stein Shower Crown must be avoided however a Plastic polish can be used to remove these.

Your Stein Shower Crown is now installed and ready to use. The Stein Shower Crown is designed to help provide a barrier between the warm, moist air inside the shower and the cooler air outside in the bathroom.

TIPS TO MAXIMIZE THE EFFICIENCY OF YOUR STEIN SHOWER CROWN

- Where possible eliminate any significant gaps around the shower door and the Shower Crown. Extra door seals are available from your Stein Retailer.
- Ensure that the shower door is properly closed when showering to help prevent warm air from escaping. On exiting the shower, leave the door slightly open to allow the shower cubicle to dry.

CONTACT**STEIN**

Freephone: 0800 002 299 **Phone:** 07 928 9990 **Fax:** 07 928 9999

Email: info@stein.co.nz **www.stein.co.nz**