

# STEIN

## **GLASS SPLASHBACK**

---

### INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY BEFORE COMMENCING INSTALLATION**

#### **GENERAL INFORMATION**

Thank you for choosing Stein Bathroomware. When you receive your package please check for any damage. If damage has occurred advise your supplier immediately and do not proceed with installation. Damage reported after installation will not be accepted.

#### **IMPORTANT**

- Place soft covering on all hard surfaces to protect the glass from damage during installation.
- Toughened Glass Splashback cannot be cut or reworked in any way.

#### **PREPARATION**

- Position the Splashback in place to check alignment and complete any preparation work required to the wall.
- Rectify any wall discrepancies required to improve alignment.
- Use a damp cloth to clean the wall and the back of the glass. Do not use chemicals with exception to methylated spirits which can be used on the glass.
- Mark the boundary points with a soft pencil or masking tape.

#### **RECOMMEND ADHESIVE (sold separately)**

Selleys Liquid Nail: **Mirror - Metal - Glass**

#### **RECOMMEND DOUBLE SIDED TAPE (sold separately)**

3M Scotch: Indoor Mounting Tape.

## GLASS SPLASHBACK INSTALLATION

- 1** Place 2mm soft plastic (or similar) packers under the Splashback when placed on a hard surface. Ensure the packers are positioned in from the outside face of the glass. Refer Diagram A.
- 2** Place recommended double sided tape onto the back of the splashback as indicated in Diagram B.
- 3** Apply recommended adhesive in even vertical strips taking care to keep away from the outside edges. Refer Diagram C.
- 4** Remove the double sided tape outer strip.
- 5** Align the splashback to the marks and onto the packers at the bottom. Press firmly to the wall starting from the bottom up. Refer Diagram D.
- 6** Seal the outside edges taking care to clean up excess.  
NOTE: The Mirror-Glass-Metal adhesive can be used to seal outside edges.

**NOTE:** If the splashback base is not supported at the base, it will require a temporary support brace for 48 hours.

DIAGRAM A

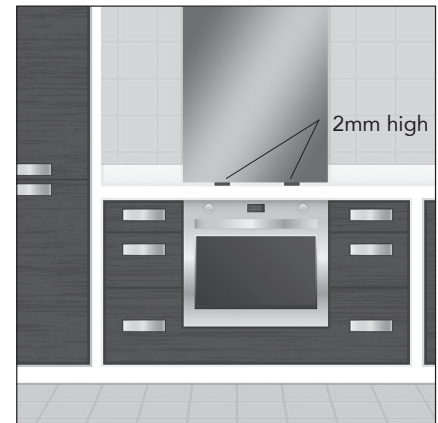


DIAGRAM B

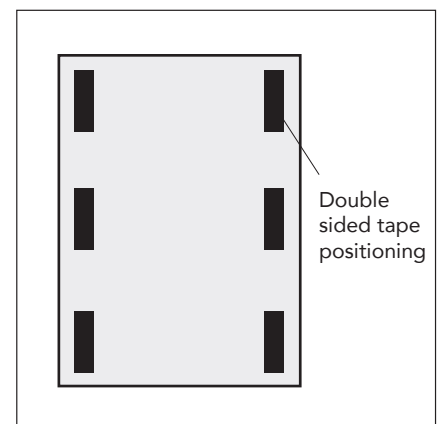


DIAGRAM C


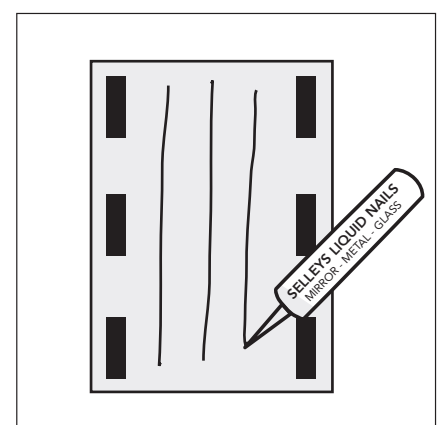


DIAGRAM D

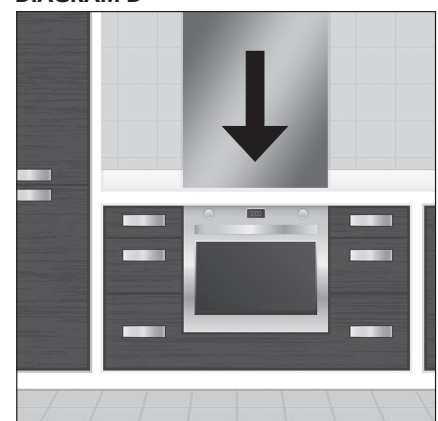

**STEIN**

113 Newton Street, Mount Maunganui  
Freephone 0800 002 299 | Phone +64 7 928 9990

[www.stein.co.nz](http://www.stein.co.nz)